



# Acer Aspire 5734z-4836 Keyboard Replacement

Replace your sticky or damaged keyboard to better your Acer Aspire.

Written By: Holly Steininger




## INTRODUCTION

The keyboard replacement is a simple replacement guide, but to remove the panel some force may be necessary.


## Step 1 — Battery



 Before removing the battery, power off your laptop and disconnect the AC adapter.

- Flip your laptop on its back so the battery is facing up and the hinges are facing away from you.


## Step 2

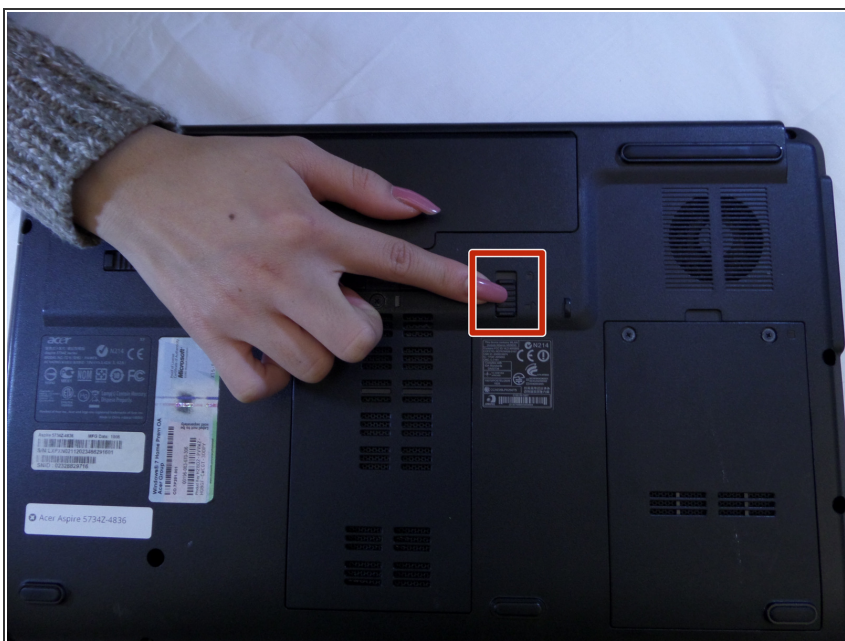

- Slide the right latch down to unlock the battery.





## Step 3

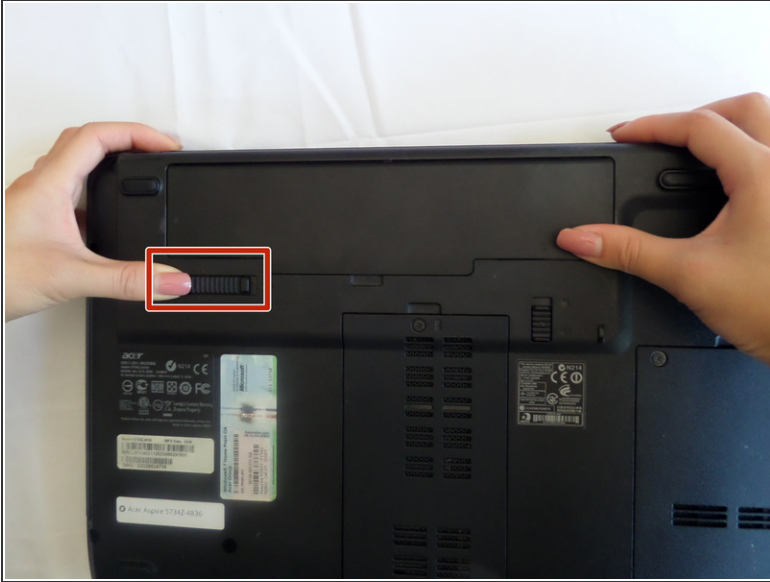


- Slide and hold the left latch below the battery.
- While holding this latch in place, pry the battery up from its bottom edge.
- Lift the old battery out of its compartment.

## Step 4 — Keyboard

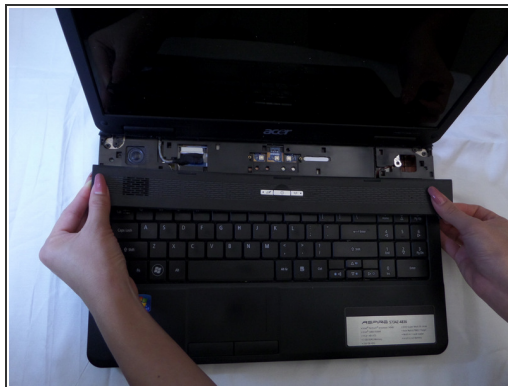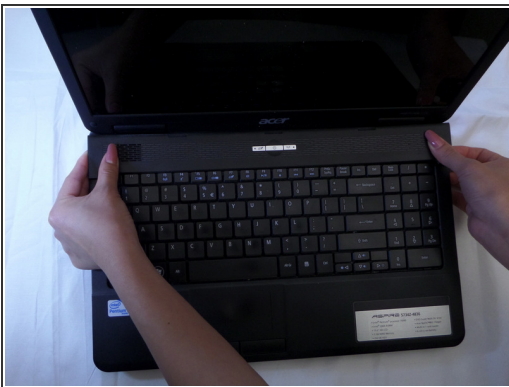

- Pinch the edges of the plastic covering above the keyboard, and pull away from the laptop until the covering pops off.
- ⓘ By using a bit of force some clicks will be heard when removing the cover.




## Step 5

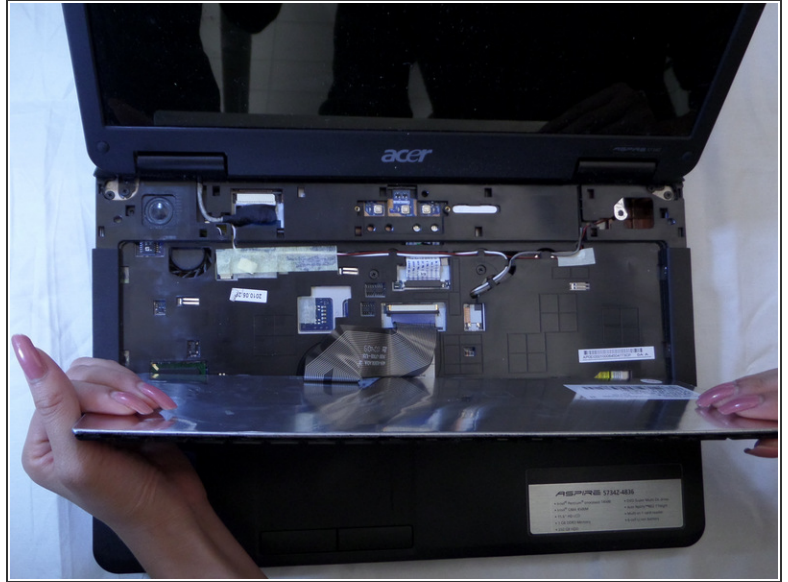

- Pull the keyboard off gently so not to damage the keyboard ribbon cable.

**i** Multiple clicks may be heard as you pull the keyboard off.

## Step 6

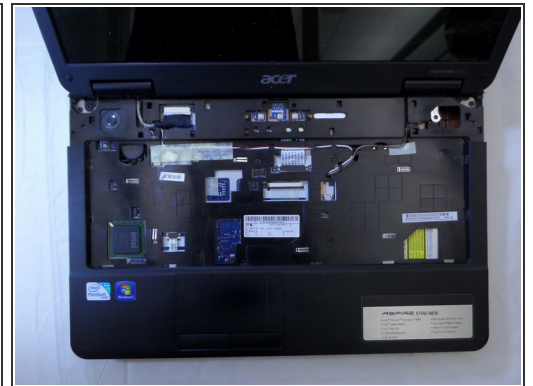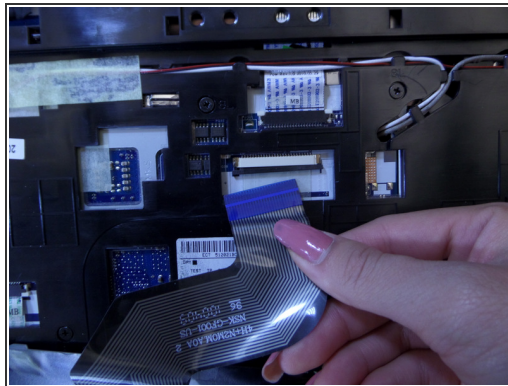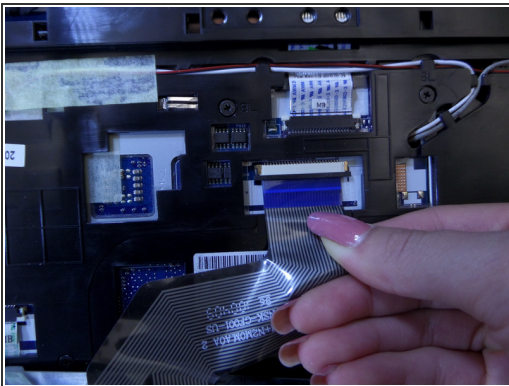

- Pull the blue keyboard ribbon cable from the ZIF connector.

**✦** When reinstalling a new keyboard, fold the ribbon in the same way the old keyboard's ribbon was folded.

To reassemble your device, follow these instructions in reverse order.

